




Important

Please Read All Instructions Carefully Before Assembling This Product

- Inspect all parts to make sure that nothing is broken or missing. If something is broken or missing, please contact our service department at support@eccboutdoor.com
- The rocker must be completely assembled before attempting to use it. Failure to do so could result in damage to the rocker or the user.
- Use proper safety gear and follow appropriate safety precautions when assembling this product.
- Important Do not overtighten the screws.
- Only hand tools should be used for assembly. Do not use power tools.
- ECCB Outdoor will not be liable for any injury or damage resulting from improper assembly and/or use of this product.
- Failure to follow all instructions will result in the product warranty being voided.


Parts

Make sure you have received everything. If anything is missing or damaged, please contact our service department at support@eccboutdoor.com.

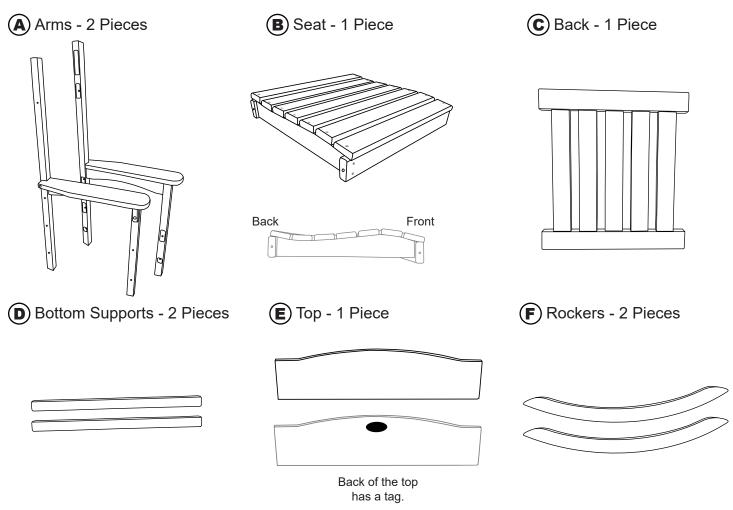

Hardware - Shown at Actual Size


Allen Wrench

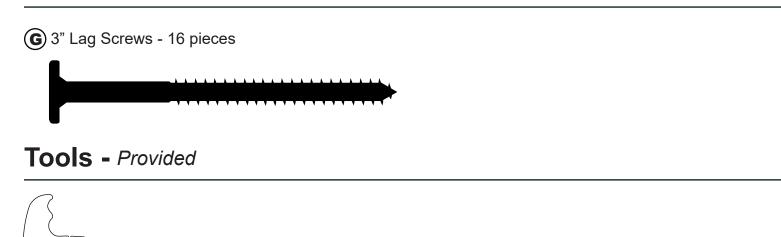

Let's Get Started!


Step 1 - Assembling Side One

- Begin with an arm (A) lying flat.
- Align the seat (B) to the pockets of the arm (A). Attach the seat (B) with the provided Allen wrench and 3" lag screws (G), be sure to not fully tighten all lag screws until the end.
- Repeat this process with the back (C) and bottom supports (D). Place the top (E) in the pocket on the arm (A).

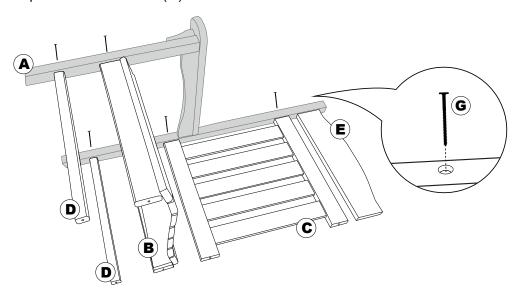

Step 2 - Attaching the Second Arm


- Place the rocker on its side.
- Attach the other arm (A) to it with the 3" lag screws (G) and provided Allen wrench (be sure not to fully tighten the lag screws until the last end).

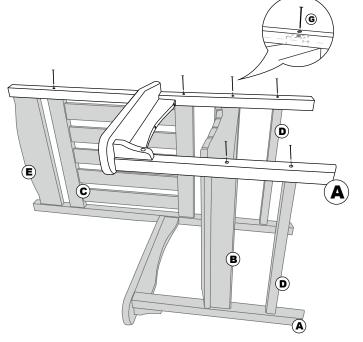

966 Perry Highway, Mercer, PA 16137 • Phone (800) 687-5086 ECCBOutdoor.com

Step 3 - Attach the Rockers

- Align the front pocket on the rocker (F) with the pre-drilled hole on the bottom of the front of the arm (A). Place a 3" lag screw (G) into the hole and tighten with the provided Allen wrench.
- Adjust the arm (A) so it aligns with the pocket on the back of the rocker (F). Place another 3" lag screw (G) into the hole and tighten it with the Allen wrench.
- Repeat this process with the other rocker (F).

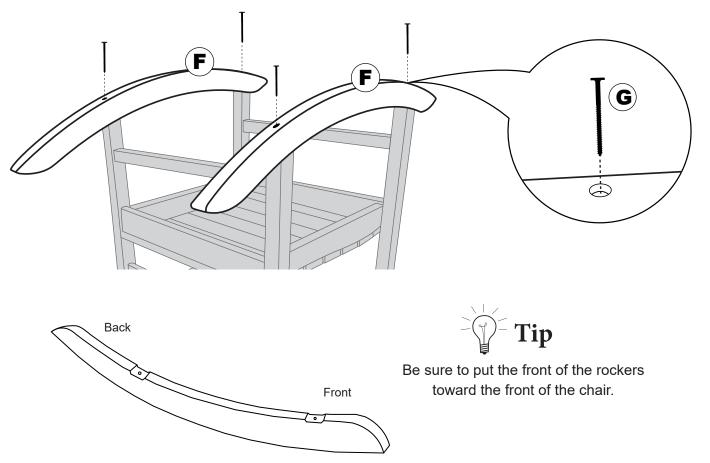

Step 4 - Tighten All Lag Screws

• Go back through the completed rocker and tighten all 3" lag screws (G) with the provided Allen wrench.

Care

Poly lumber is easy to clean and maintain. Dust with a soft cloth or soft bristle brush, and tend to spills and stains with a mild soap and water. No waterproofing, no staining, and no painting is ever required! IMPORTANT! Periodically check to make sure that all screws are properly tightened.

That's all there is to it and now you have a comfortable rocker that we hope you will enjoy. Thank you for your business!