



Assembly Instructions Poly Ridge Rocker

Congratulations on the purchase of your new Poly Ridge Rocker. You will soon be sitting back and relaxing in the comfort of this lodge style rocking chair when you follow these easy step-by-step instructions.

Please Read All Instructions Carefully Before Assembling This Product

- Inspect all parts to make sure that nothing is broken or missing. If something is broken or missing, please contact our service department at support@eccboutdoor.com.
- The rocker must be completely assembled before attempting to use it. Failure to do so could result in damage to the chair or the user.
- Use proper safety gear and follow appropriate safety precautions when assembling this product.
- Important Do not overtighten the screws.
- Only hand tools should be used for assembly. Do not use power tools.
- ECCB Outdoor will not be liable for any injury or damage resulting from improper assembly and/or use of this product.
- Failure to follow all instructions will result in the product warranty being voided.

Hardware - Shown at Actual Size






Square Screwdriver

Make sure you have received everything.

If anything is missing or damaged, please contact our service department at **support@eccboutdoor.com**.

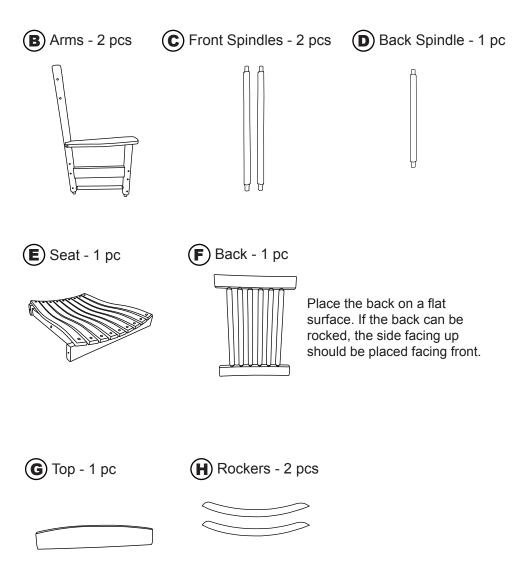


Step 1 - Assembling Side One

- Lay an arm on its side with the pockets facing up. To make this easier, place the arm on a table with the armrest hanging off the edge of the table. You can start this process with either arm.
- Then place the following items into the pockets in this order:


Loosely attach each piece with screws before moving onto the next piece. You will tighten them later in step 3.

- (C) Front Spindles
- (D) Back Spindle This one is slightly shorter than the front spindles
- (E) Seat The front of the seat is slightly wider
- (F) Back See previous page to determine the front and back
- (G) Top Make sure the curved part is at the top and the tag is on the back of the rocker

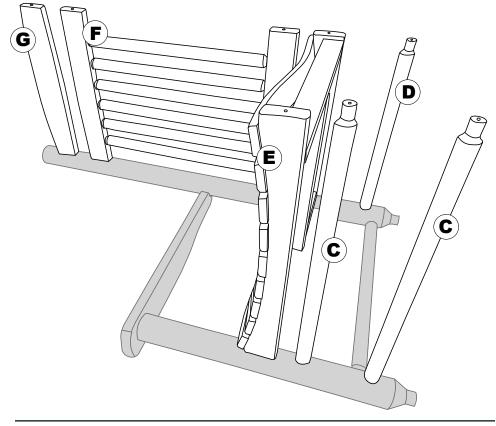


Step 2 - Attaching Side Two

- Flip the rocker over with the unassembled side facing up so that you can attach the second arm (B)
- · First insert the spindles into the pockets on the second arm
- Then insert the seat into the pockets and continue moving up the rocker until everything is aligned.
- Begin to attach the arm using the provided screws. These screws can be fully tightened during this step.
- Once side two is all attached tighten the screws on the other side from Step 1.

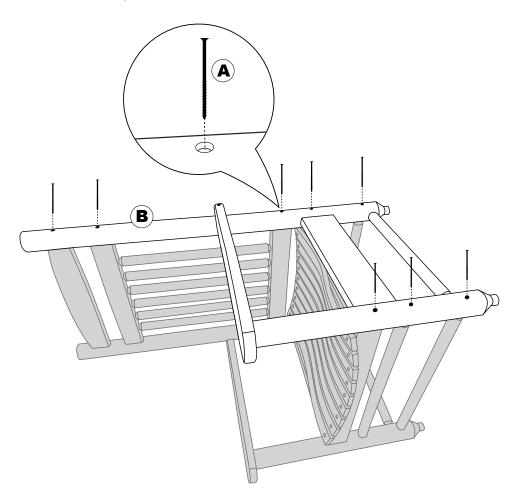

Step 3 - Attaching the Rocker Bottoms

- Turn the rocker upside down.
- Attach the rockers (H) to the bottom using the remaining hardware. The front of the rockers have the hole closest to the end. *See bottom illustration.*

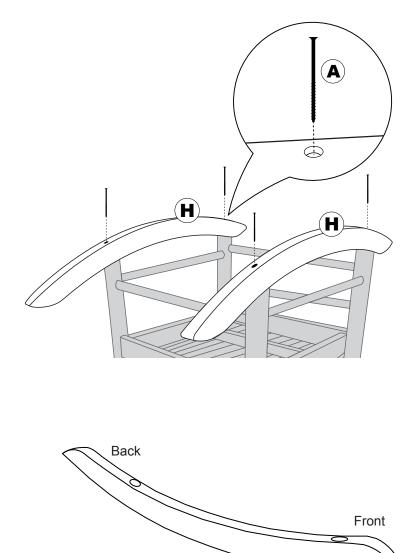

Care For Your Rocker

Poly lumber is easy to clean and maintain. Dust with a soft cloth or soft bristle brush, and tend to spills and stains with a mild soap and water. No waterproofing, no staining, and no painting is ever required! IMPORTANT! Periodically check to make sure that all screws are properly tightened.

That's all there is to it and now you have a comfortable rocking chair that we hope you will enjoy. Thank you for your business!

Send Us Your Pictures Get Entered in a Giveaway!

We would love to see photos of your chairs! Send us your pictures to photos@eccboutdoor.com

to be entered to win a \$50 ECCBOutdoor.com store credit. Rules for the contest can be found at www.eccboutdoor.com/photocontest.





966 Perry Highway, Mercer, PA 16137 • Phone (800) 687-5086 ECCBOutdoor.com

We Hope You Enjoy Your New Adirondack Chair!

For more great poly lumber products, check out our full line at

ECCBOutdoor.com

Adirondack Chairs Side Tables Rocking Chairs Dining Sets Swings Gliders Benches Deep Seating

