



# EAST COAST

CHAIR & BARSTOOL

## Assembly Instructions

*Caribbean Side Bar Stool*



Congratulations on the purchase of your new Caribbean Side Bar Stool. You will soon be enjoying your outdoor area in the comfort of this classic side bar stool when you follow these easy step by step instructions.

## Important

### **Please Read All Instructions Carefully Before Assembling This Product**


- Inspect all parts to make sure that nothing is broken or missing. If something is broken or missing, please contact our service department at [service@ecchairandbarstool.com](mailto:service@ecchairandbarstool.com).
- The bar stool must be completely assembled before attempting to use it. Failure to do so could result in damage to the bar stool or the user.
- Use proper safety gear and follow appropriate safety precautions when assembling this product.
- **Important - Do not over-tighten the bolts.**
- Only hand tools should be used for assembly. Do not use power tools.
- East Coast Chair & Barstool will not be liable for any injury or damage resulting from improper assembly and/or use of this product.
- Failure to follow all instructions will result in the product warranty being voided.

# Parts


---

Make sure you have received everything. If anything is missing or damaged, please contact our service department at [service@ecchairandbarstool.com](mailto:service@ecchairandbarstool.com).

**A** Frame - 1 pc

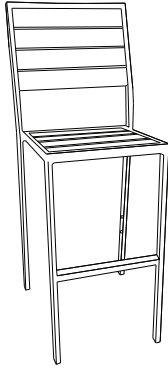


**B** Brace - 1 pc

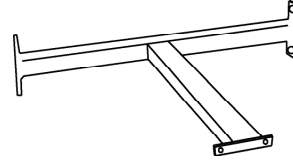

# Hardware - *Shown at Actual Size*

---

**C** Bolts - 6 pcs

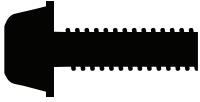

These are located in a bag taped to the leg.

# Tools -

---




$\frac{3}{16}$  in. (5mm) Allen Wrench

# Let's Get Started!

## Step 1 - Align the Brace with the Bar Stool

---

- Remove the bolts from the bag taped to the bar stool (A)
- Attach the brace (B) to the legs using the bolts (C)
- Begin to thread bolts but don't tighten completely

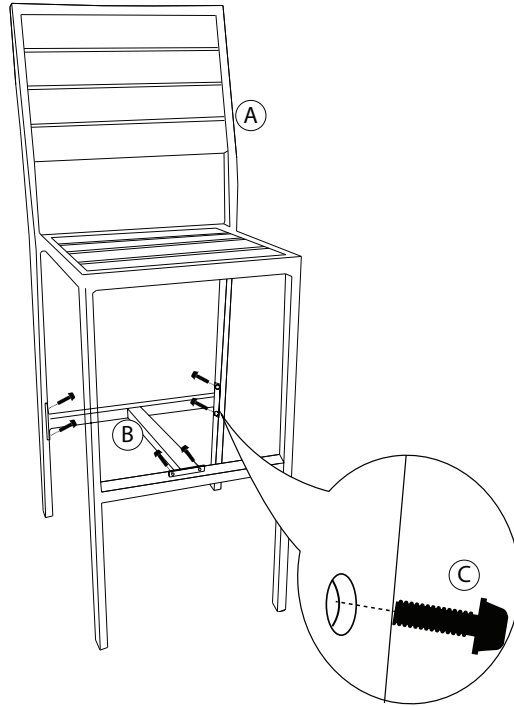


### Tip

Screw in the bolts on the back part of the brace to more easily attach the front bolts.

## Step 2 - Finish Threading Bolts

---

- Once the brace (B) is aligned correctly finish threading the bolts (C) to secure the brace

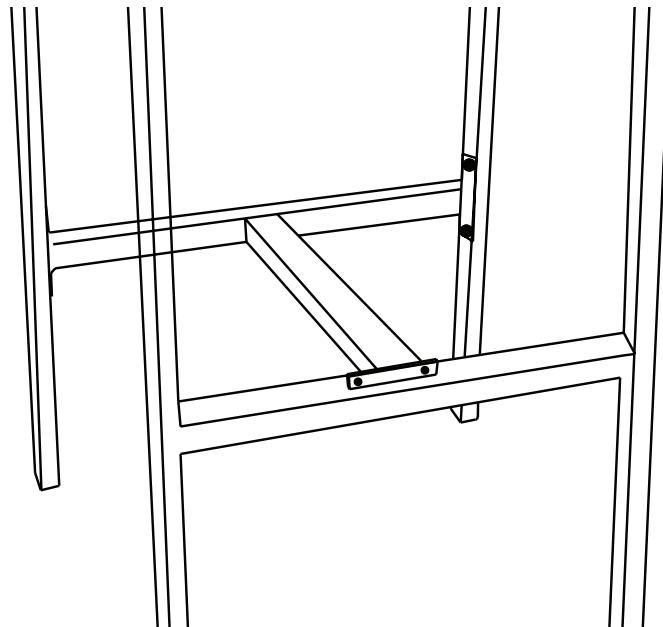

# Care

---

Poly lumber is easy to clean and maintain. Dust with a soft cloth or soft bristle brush, and tend to spills and stains with a mild soap and water. No waterproofing, no staining, and no painting is ever required!  
**IMPORTANT!** Periodically check to make sure that all bolts are properly tightened.

The aluminum frame can be cleaned by wiping down with soap and water.

That's all there is to it and now you have a comfortable bar stool that we hope you will enjoy.  
Thank you for your business!